

You should not have to replace any batteries. New batteries in a timer will last at least 4 days. The warning that flashes “Low AUX Batteries” means I did not set the timer up correctly or it got reset in some way. This means the radio batteries are low, not the timer batteries. This warning can be ignored



Turn the timer over -->

Remove the cover using the center screw. It should turn by hand, otherwise use a dime.



Remove only the bottom 2 batteries, never remove all 4 batteries at any one time.

Replace the batteries making sure to observe the correct orientation. -->

Replace cover

